
INSTALLATION INSTRUCTIONS

6891安裝說明

- 1. Use **Bracket** as template to locate appropriate drilling centers with pencil, 使用固定鐵片和鉛筆在預定鑽孔的位置,畫上記號,
- 2. Use 6mm drilling bit to drill holes in your marked locations, when mounting on drywall, insert **Plastic Anchors.**

當安裝在水泥牆,使用1/4英吋鑽頭,鑽孔深度4公分,崁入塑膠塞並使之齊平於牆面.

- 3. Attach Bracket to wall with Wall Screws. 將固定鐵片以螺絲鎖在牆面上.
- 4. Locate the Main Part on the Bracket and secure with Set Screw. 在固定鐵片上面掛住產品本體,並以螺絲起子由下方鎖緊埋頭螺絲,完成安裝程序.

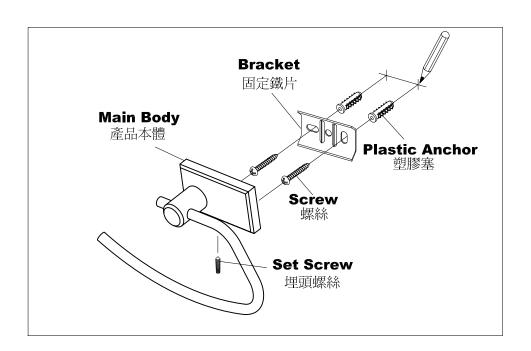

6891 **SERIES:**

